

Typical Installation of Earthwise Windows



Drop Cloth



Remove Stop




Remove Sashes




Insert Window



Secure Window

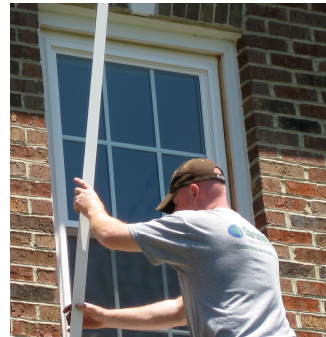

Apply Capping (Trim)

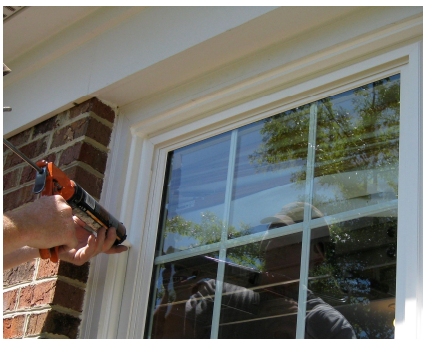

Caulk Window



Completed Window